

# APS Pole Mounting Adaptor

When Signal Poles are used for Push Buttons



# “Saddle Adaptor” on Pedestal Pole

Used on existing pedestal poles.



# Button in middle of sidewalk



# ADA compliance isn't enough



Locate push buttons (PB) 6' min. from obstructions whenever possible to allow an adequate MAR.



Move PB to the back of landing when a 6' MAR can't be achieved.



# Minnesota's Sidewalks



Total system consists of over 600 miles of sidewalk on MnDOT right of way.



# Minnesota's Sidewalks




Of that 600 miles only 263.5 miles are considered fully compliant.





# Typical Doorway Landings

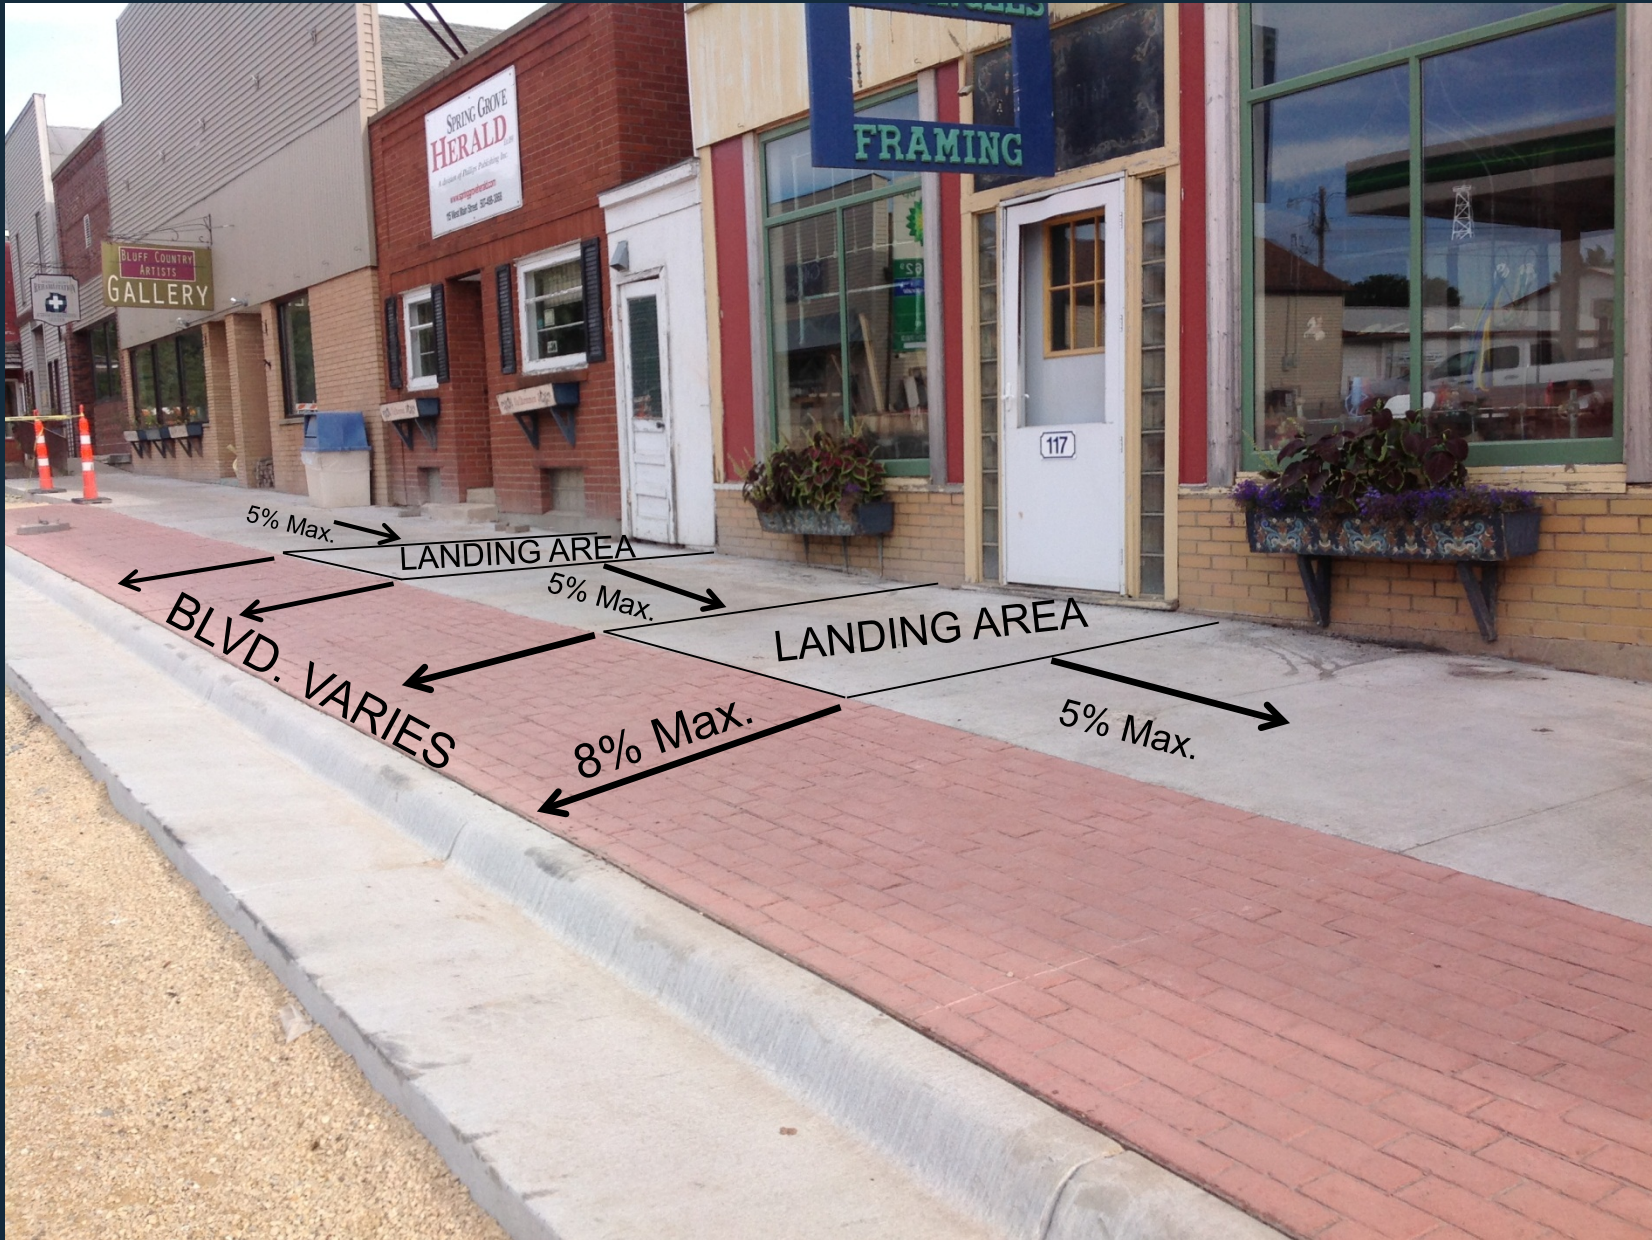



# ADA Sidewalk Construction



## Construction Oversight Projects



# Architectural Details



# ADA Pedestrian Facilities



# ADA Pedestrian Facilities



# ADA Pedestrian Facilities



# Standalone vs. Mill and Overlay Project



# Standalone vs. Mill and Overlay Project



# ADA Pedestrian Facilities





# ADA Pedestrian Facilities



# ADA Pedestrian Facilities



# ADA Pedestrian Facilities

